

SAJ



H2 Serie

HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG H2-(10K-30K)-(T2, T3)



GUANGZHOU SANJING ELECTRIC CO., LTD



Tel: (86)20 66608588 Fax: (86)20 66608589 Web: www.saj-electric.com

Adresse: SAJ Innovation Park, No.9, Lizhishan Road, Science City, Guangzhou High-Tech Zone, Guangdong,

Volksrepublik China

Vorwort



INHALTSVERZEICHNIS

1.	SICHERHEITSMASSNAHMEN	1
	1.1. Anwendungsbereich	2
	1.2. Sicherheit	2
	1.2.1. Sicherheitsstufen	2
	1.2.2. Symbol Erläuterung	3
	1.2.3. Sicherheitshinweise	
	1.3. Sichere Handhabung	4
2.	Produktübersicht	5
	2.1. Allgemeine Einführung	6
	2.2. Auspacken	7
	2.3. Abmessungen	
	2.4. Datenblatt	9
3.	Aufstellung Anleitung	13
	3.1. Bestimmung des Aufstellungsortes	14
	3.1.1. Anforderungen an die Installationsumgebung	14
	3.1.2. Anforderungen an den Aufstellungsort	14
	3.2. Montageverfahren	16
	3.2.1. Installationswerkzeug	16
	3.2.2. Vorgehensweise bei der Montage	17
4.	Elektrischer Anschluss	10
	4.1. Sicherheitshinweise	10
	4.2. Anschluss	10
	4.3. Erdung	11
	4.4. Montage des AC-seitigen elektrischen Anschlusses	22
	4.4.1. Installieren Sie einen Schutzschalter	22
	4.4.2. Installation eines FI-Schutzschalters (optional)	22
	4.4.3. Anschluss des Netzes und der Notstromversorgung	22

	4.5. Montage der Kommunikationsverbindung	
	4.6. Anschließen des BMS	
	4.7. Montage des elektrischen Anschlusses auf der PV-Seite	
	4.8. Installieren des Kommunikationsmoduls	
	4.9. Erdschlussalarm	
	4.10. Systemanschluss	
	4.11. System-Anwendungsdiagramm	
	4.12. AFCI	
5.	Starten und Herunterfahren	
	5.1. Starten des Wechselrichters	
	5.1.1. Einführung in die LED-Anzeigen	
	5.2. Abschalten des Wechselrichters	
6.	Inbetriebnahme	
	6.1. Installation der eSAJ Home App	
	6.2. Bei der App anmelden und die Initialisierungseinstellungen durchführen	
	6.3. Überprüfen der Wechselrichter-Einstellungen	
	6.4. Konfigurieren der Fernüberwachung	
	6.5. Auswählen des Arbeitsmodus	
	6.6. Konfigurieren des Exportlimits	
	6.7. Selbsttest (Für Italien)	
7.	Fehlerbehebung	
8.	Anhang	
	8.1. Recycling und Entsorgung	54
	8.2. Transport	54
	8.3. Garantie	
	8.4. Kontaktaufnahme mit der Unterstützung	54
	8.5. Warenzeichen	

1.1. Anwendungsbereich

H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2
H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3

Bitte lesen Sie die Bedienungsanleitung vor der Installation, dem Betrieb und der Wartung sorgfältig durch und befolgen Sie die Anweisungen während der Installation und des BetriebsBewahren Sie dieses Handbuch für Notfälle stets griffbereit auf.

Nur qualifizierte Elektriker, die alle in dieser Anleitung enthaltenen Sicherheitsvorschriften gelesen und vollständig verstanden haben, dürfen den Wechselrichter installieren, warten und reparieren. Die Bediener müssen sich bewusst sein, dass es sich um ein Hochspannungsgerät handelt.

- 1.2. Sicherheit
- 1.2.1. Sicherheitsstufen

Verletzungen führt.

mittelschweren Verletzungen führen kann.

Verletzungen führen kann

SICHERHEITSMASSNA **HMEN**



HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG

Diese Bedienungsanleitung beschreibt Anweisungen und detaillierte Verfahren zur Installation, zum Betrieb, zur Wartung und zur Fehlerbehebung der folgenden SAJ Hybrid-Solarwechselrichter:



GEFAHR

GEFAHR weist auf eine gefährliche Situation hin, die, wenn sie nicht vermieden wird, zum Tod oder zu schweren



WARNUNG weist auf eine gefährliche Situation hin, die, wenn sie nicht vermieden wird, zum Tod oder zu schweren oder



· VORSICHT weist auf eine gefährliche Situation hin, die, wenn sie nicht vermieden wird, zu leichten oder mittelschweren



HINWEIS

HINWEIS weist auf eine Situation hin, die zu möglichen Schäden führen kann, wenn sie nicht vermieden wird.

1.2.2. Symbol Erläuterung

Symbol	Beschreibung
4	Gefährliche elektrische Spannung Dieses Gerät ist direkt an das öffentliche Stromnetz angeschlossen, daher dürfen alle Arbeiten am Umwandler nur von qualifiziertem Personal durchgeführt werden.
4 Contraction	Lebensgefahr durch hohe elektrische Spannung! Aufgrund der großen Kondensatoren können im Wechselrichter Restströme auftreten. Warten Sie 5 MINUTEN, bevor Sie die Frontklappe abnehmen.
<u> </u>	Hinweis, Gefahr! Der Wechselrichter ist direkt mit Stromgeneratoren und dem öffentlichen Stromnetz verbunden.
555	Gefahr durch heiße Oberfläche Die Komponenten im Inneren des Wechselrichters geben während des Betriebs viel Wärme ab. Berühren Sie während des Betriebs nicht das Metallblechgehäuse.
	Es ist ein Fehler aufgetreten Bitte gehen Sie zu Kapitel 7 "Fehlerbehebung", um den Fehler zu beheben.
	Dieses Gerät darf NICHT im Hausmüll entsorgt werden. Dieses Gerät darf NICHT im Hausmüll entsorgt werden. Bitte lesen Sie in Abschnitt 8.1 "Recycling und Entsorgung" nach, wie Sie es richtig behandeln.
Œ	CE-Kennzeichnung Mit dem CE-Zeichen & erfüllt der Wechselrichter die grundlegenden Anforderungen der Richtlinie über Niederspannung und elektromagnetische Verträglichkeit.
	RCM-Zeichen Das Gerät erfüllt die Sicherheits- und sonstigen Anforderungen der australischen und neuseeländischen Gesetze/Vorschriften zur elektrischen Sicherheit.

1.2.3. Sicherheitshinweise

GEFAHR
Es besteht Lebensgefahr durch Stromschlag und Hochspannung.
Berühren Sie nicht die Betriebskomponenten des Wechselrichters; dies kann zu Verbrennungen oder zum Tod führen.
 Um das Risiko eines Stromschlags bei der Installation und Wartung zu vermeiden, stellen Sie sicher, dass alle AC- und DC-Klemmen ausgesteckt sind.
 Berühren Sie die Oberfläche des Geräts nicht, wenn das Gehäuse nass ist, da dies sonst zu einem Stromschlag führen kann.
 Halten Sie sich nicht in der N\u00e4he des Ger\u00e4ts auf, wenn schwere Wetterbedingungen herrschen, wie z. B. Sturm, Blitz, usw.
 Vor dem Öffnen des Gehäuses muss der Wechselrichter SAJ vom Stromnetz und vom PV-Generator getrennt werden; Sie müssen mindestens fünf Minuten warten, damit sich die
Energiespeicher-Kondensatoren nach dem Trennen vom Stromnetz vollständig entladen können.

	Die Installation, der Kundendienst, da
,	von qualifiziertem Personal unter Einł
(durchgeführt werden.

- darstellen.
- · SAJ ist nicht verantwortlich für den Verlust und diese Garantieansprüche.
- andere Energiequelle an den SAJ-Wechselrichter an.
- Personen zu schützen.

•	Der Wechselrichter wird während de
	Betrieb nicht den Kühlkörper oder di
•	Gefahr der Beschädigung durch unsa

•	Nur für öffentliche Versorgungsunte
•	Der Wechselrichter ist für die direkte
	ausgelegt; schließen Sie den AC-Aus

1.3. Sichere Handhabung

- vermeiden.
- Nutzungsanforderungen entspricht.
- ۲ oder das Gerät kann nicht richtig arbeiten.



WARNUNG

as Recycling und die Entsorgung der Wechselrichter dürfen nur naltung der nationalen und lokalen Normen und Vorschriften

· Jegliche unbefugten Handlungen, einschließlich der Veränderung der Produktfunktionalität in jeglicher Form, können eine tödliche Gefahr für den Bediener, Dritte, die Geräte oder deren Eigentum

Der SAJ-Wechselrichter darf nur mit einem PV-Generator betrieben werden. Schließen Sie keine

Stellen Sie sicher, dass der PV-Generator und der Wechselrichter gut geerdet sind, um Eigentum und

VORSICHT

es Betriebs heiß. Bitte berühren Sie während oder kurz nach dem ie Peripheriefläche.

achgemäße Änderungen.



rnehmen.

e Einspeisung von AC-Strom in das öffentliche Stromnetz gang des Wechselrichters nicht an private AC-Geräte an.

Nur qualifizierte Elektriker, die alle in diesem Handbuch enthaltenen Sicherheitsvorschriften gelesen und vollständig verstanden haben, können den Wechselrichter installieren, warten und reparieren.

Wenn der Wechselrichter arbeitet, berühren Sie keine internen Bauteile oder Kabel, um Stromschläge zu

Stellen Sie vor dem Austausch eines internen Bauteils im Wechselrichter sicher, dass der DC-Schalter des Wechselrichters ausgeschaltet und mit einem Werkzeug verriegelt ist und dass das neue Bauteil den

Wenn der Wechselrichter arbeitet, dürfen Sie die Kabel nicht einstecken oder abziehen.

Stellen Sie sicher, dass die AC-Eingangsspannung und -Stromstärke mit der Nennspannung und -Stromstärke des Wechselrichters kompatibel sind; andernfalls können Komponenten beschädigt werden

PRODUKTÜBERSICHT

2.1. Allgemeine Einführung

Der Wechselrichter der H2-Serie ist ein hybrider Photovoltaik-Wechselrichter, der sowohl für Netzbetrieb als auch für netzunabhängige Solarsysteme geeignet ist. Die von der Photovoltaikanlage (PV) erzeugte Energie wird zunächst in die Verbraucher eingespeist, die überschüssige Energie lädt die Batterie für die spätere Nutzung auf, und wenn noch überschüssige Energie vorhanden ist, wird sie ins Netz eingespeist.

Abhängigkeit vom Netz verringern.

PV-Anlage



HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG

Der H2-Wechselrichter kann die Eigenverbrauchsquote von Solarenergie erheblich verbessern und die

2.2. Auspacken

2.3. Abmessungen





Zu den Dokumenten gehören das Handbuch, die Kurzanleitung zur Installation, die Garantiekarte und die Verpackungsliste.



2.4. Datenblatt

Modell	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2
DC-Eingang			·		
Max. PV-Anlagenleistung [Wp]@STC	20000	24000	30000	30000	30000
Max. DC-Spannung [V]			1000	· · · · · ·	
MPPT Spannungsbereich [V]			180 - 900		
DC-Nennspannung [V]			600		
Startspannung [V]			180		
Max. DC-Eingangsstrom [A]	40/4	0/40	40/40	40/40/40	40/40
Max. DC-Kurzschluss-Strom [A]	50/5	0/50	50/50	50/50/50	50/50
Anzahl der MPPT	:	3	2	3	2
Anzahl der Strings pro MPP-Tracker	2/2	2/2	2/2	2/2/2	2/2
Akku-Anschluss			I	1 1	
Akkutyp			LiFePO4		
Akku-Spannungsbereich [V] 180 -					
Max. Lade-/Entladestrom [A]			2*50		
AC-Ausgang [Netzbetrieb]					
AC-Nennleistung [W]	10000	12000	15000	15000	20000
Max. Scheinleistung [VA]	11000	13200	16500	16500	22000
Ausgangs-Nennstrom [A]@230 V AC	14,5	17,4	21,8	21,8	29,0
Max. AC-Strom am Ausgang zum Stromnetz [A]	16,0	19,2	24,0	24,0	31,9
AC-Nennspannung/Bereich [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485				
Nennausgangsfrequenz/Bereich [Hz]	● 50:45 - 55 ● 60:55 - 65				
Leistungsfaktor [cos φ]	0,8 kapazitativ ~ 0,8 induktiv				
Harmonische Gesamtverzerrung [THDi]			<3%		
AC-Eingang [Netzbetrieb]					
AC-Nennspannung/Bereich [V]		3+N+PE, 220/38	80, 230/400, 240/415; 18	80 - 280/312 - 485	
Nenn-Eingangsfrequenz [Hz]	50, 60				
Max. Eingangsstrom [A]@230 V AC	28,3	28,3	28,3	28,3	37,7
AC-Ausgang [Sicherung]		·			
Max. Ausgangsleistung [VA]	10000	12000	15000	15000	20000
Max. Ausgangsstrom [A]	14,5	17,4	21,8	21,8	29,0
Spitzenleistung des Ausgangs [VA]	15.000, 3 Sek	18.000, 3 Sek	22.500, 3 Sek	22.500, 3 Sek	30.000, 3 Sek

Modell	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2	
AC-Nennspannung/Bereich [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Nennausgangsfrequenz/Bereich [Hz]	• 50:45 - 55					
	• 00.00 - 00					
Ausgang THDV (@ bei linearer Last)	<3%					
Wirkungsgrad			00.0%			
Max. Wirkungsgrad			98,0%			
Euro-Wirkungsgrad			97,6%			
Schutz						
Schutz vor Verpolung des Akku-Eingangs			Integriert			
Uberlastschutz			Integriert			
AC-Kurzschluss-Schutz			Integriert			
DC-Überspannungsschutz			Тур II			
AC-Überspannungsschutz			Тур II			
Anti-Inselschutz			Integriert			
AFCI Schutz	AFCI Schutz Integriert					
Schnittstelle						
PV-Anschluss			D4,MC4 (Optional)			
AC-Anschluss			Klemmenblock			
skku-Anschluss Schnellsteckverbindung						
Display LED + App						
Kommunikation	WLAN/4G/Ethernet (Optional)					
Allgemeine Parameter						
Topologie			Nicht isoliert			
Betriebstemperaturbereich		-40 °C bis +60 °C	(45 ℃ und darüber mit	Leistungsminderung)		
Kühlungsverfahren		In	telligente Ventilatorküh	lung		
Umgebungsluftfeuchtigkeit		0	-100 % nicht kondensie	rend		
Höhenlage		4.000 n	n (>3.000 m Leistungsm	inderung)		
Geräusch [dBA]			<50			
Schutz gegen Eindringen			IP65			
Abmessungen [H x B x T] [mm]	576*659*242					
Gewicht [kg]			50			
Garantie [Jahr]		Siel	ne die Garantiebestimm	ungen		
Standard	EN 62109-1/2, EN 61 UNE 206007, NT	000-6-2/4, EN 50438, E S, CEI 0-16, CEI 0-021, A	N 50549, C10/11, IEC 62 AS 4777.2, NBR 16149, N	2116, IEC 61727, RD 169 NBR 16150 VDE-AR-N 4	9, RD 413, UNE 206006, 105, VDE 0126-1-1	

-		

Modell	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3	
DC-Eingang				1		
Max. PV-Anlagenleistung [Wp]@STC	40000	45000	45000	45000	45000	
Max. DC-Spannung [V]			1000			
MPPT Spannungsbereich [V]			180 - 900			
DC-Nennspannung [V]			600			
Startspannung [V]			180			
Max. DC-Eingangsstrom [A]			40/40/40			
Max. DC-Kurzschluss-Strom [A]			50/50/50			
Anzahl der MPPT			3			
Anzahl der Strings pro MPP-Tracker			2/2/2			
Akku-Parameter						
Akkutyp			LiFePO4			
Akku-Spannungsbereich [V]			180 - 800			
Max. Lade-/Entladestrom [A]	2*50					
AC-Ausgang [Netzbetrieb]						
AC-Nennleistung [W]	20000	25000	25000	29999	30000	
Max. Scheinleistung [VA]	22000	25000	27500	29999	33000	
Ausgangs-Nennstrom [A]@230 V AC	29,0	36,3	36,3	43,4	43,5	
Max. AC-Strom am Ausgang zum Stromnetz [A]	31,9	36,3	39,9	43,4	47,9	
AC-Nennspannung/Bereich [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Nennausgangsfrequenz/Bereich [Hz]	• 50:45 - 55 • 60:55 - 65					
Leistungsfaktor [cos d]	0.8 kapazitativ ~ 0.8 induktiv					
Harmonische Gesamtverzerrung [THDi]	<3%					
AC-Eingang [Netzbetrieb]						
AC-Nennspannung/Bereich [V]		3+N+PE, 220/3	80, 230/400, 240/415;	180 - 280/312 - 485		
Nenn-Eingangsfrequenz [Hz]			50, 60			
Max. Eingangsstrom [A]@230 V AC	37,7	47,2	47,2	56,5	56,6	
AC-Ausgang [Sicherung]				11		
Max. Ausgangsleistung [VA]	20000	25000	25000	29999	30000	
Max. Ausgangsstrom [A]	29,0	36,3	36,3	43,4	43,5	
Spitzenleistung des Ausgangs [VA]	30.000, 3 Sek	37.500, 3 Sek	37.500, 3 Sek	45.000, 3 Sek	45.000, 3 Sek	
AC-Nennspannung/Bereich [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Nennausgangsfrequenz/Bereich [Hz]	 50:45 - 55 60:55 - 65 					

Modell	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3
Ausgang THDv (@ bei linearer Last)	<3%				
Wirkungsgrad	Virkungsgrad				
Max. Wirkungsgrad			98,0%		
Euro-Wirkungsgrad			97,6%		
Schutz	•				
Schutz vor Verpolung des Akku-Eingangs			Integriert		
Überlastschutz			Integriert		
AC-Kurzschluss-Schutz			Integriert		
DC-Überspannungsschutz			Тур II		
AC-Überspannungsschutz			Тур II		
Anti-Inselschutz			Integriert		
AFCI Schutz			Integriert		
Schnittstelle					
PV-Anschluss			D4,MC4 (Optional)		
AC-Anschluss		Klemmenblock			
Akku-Anschluss	Schnellsteckverbindung				
Display	LED + App				
Kommunikation	WLAN/4G/Ethernet (Optional)				
Allgemeine Parameter					
Topologie	Nicht isoliert				
Betriebstemperaturbereich	-40 °C bis +60 °C (45 °C und darüber mit Leistungsminderung)				
Kühlungsverfahren	Intelligente Ventilatorkühlung				
Umgebungsluftfeuchtigkeit	0-100 % nicht kondensierend				
Höhenlage	4.000 m (>3.000 m Leistungsminderung)				
Geräusch [dBA]	<50				
Schutz gegen Eindringen	IP65				
Abmessungen [H x B x T] [mm]	576*659*242				
Gewicht [kg]	50				
Garantie [Jahr]		Sie	he die Garantiebestimm	nungen	
Standard	EN 62109-1/2, EN 61000-6-2/4, EN 50438, EN 50549, C10/11, IEC 62116, IEC 61727, RD 1699, RD 413, UNE 206006, UNE 206007, NTS, CEI 0-16, CEI 0-021, AS 4777.2, NBR 16149, NBR 16150 VDE-AR-N 4105, VDE 0126-1-1				

\prec			

AUFSTELLUNG ANLEITUNG

•	Lebensgefahr durch möglichen Brand
•	Installieren Sie den Wechselrichter ni
•	Dieses Gerät entspricht dem Verschn
•	Eine ungeeignete oder nicht abgestir
	Wechselrichters gefährden.
•	Fine Installation unter direkter Sonne
	Ente motanation anter an enter ooning

3.1. Bestimmung des Aufstellungsortes

3.1.1. Anforderungen an die Installationsumgebung

- •

- Halten Sie das Gerät von Kindern fern.
- Badezimmer, Theater und Dachboden,
- ٠
- Versickern von Wasser zu verhindern.
- ٠ ist.
- Ort bestimmt.

3.1.2. Anforderungen an den Aufstellungsort

- werden.
- Leistungsminderung aufgrund von Überhitzung führen kann.
- •



GEFAHR

d oder Stromschlag.

icht in der Nähe von brennbaren oder explosiven Gegenständen.

🔰 HINWEIS

mutzungsgrad. mmte Installationsumgebung kann die Lebensdauer des

eneinstrahlung wird nicht empfohlen. et sein.

Die Umwelt, in der das Gerät installiert wird, muss frei von brennbaren oder explosiven Materialien sein.

Das Gerät muss an einem Ort installiert werden, der fern von Wärmequellen ist.

Installieren Sie das Gerät nicht an einem Ort, an dem sich die Temperatur extrem verändert.

Installieren Sie das Gerät nicht an Orten, an denen täglich gearbeitet oder gewohnt wird, einschließlich, aber nicht beschränkt auf folgende Bereiche: Schlafzimmer, Wohnzimmer, Arbeitszimmer, Toilette,

Wenn Sie das Gerät in der Garage installieren, halten Sie es bitte von der Einfahrt fern.

Halten Sie das Gerät von Wasserquellen wie Wasserhähnen, Rohrleitungen und Sprinklern fern, um ein

Installieren Sie das Gerät an einem stark frequentierten Ort, an dem die Störung wahrscheinlich zu sehen

Hinweis: Bei der Installation im Außenbereich sollte die Höhe des Geräts über dem Boden berücksichtigt werden, um ein Durchsickern des Geräts zu verhindern. Die spezifische Höhe wird durch die Umwelt vor

Das Gerät arbeitet mit natürlicher Konvektionskühlung und kann im Innen- oder Außenbereich installiert

Setzen Sie den Wechselrichter nicht der direkten Sonneneinstrahlung aus, da dies zu einer

Installieren Sie den Wechselrichter vertikal oder rückwärts mit einem maximalen Winkel von 15 Grad. Neigen Sie ihn nicht nach vorne, zur Seite, horizontal oder auf den Kopf.



- Wählen Sie eine feste und glatte Wand, um sicherzustellen, dass der Wechselrichter sicher an der Wand • installiert werden kann. Stellen Sie sicher, dass die Wand das Gewicht des Wechselrichters und des Zubehörs tragen kann.
- Sorgen Sie für genügend Freiraum um den Wechselrichter herum, um eine gute Luftzirkulation am • Aufstellungsort zu gewährleisten, insbesondere wenn mehrere Wechselrichter im gleichen Bereich installiert werden sollen.



3.2. Montageverfahren

3.2.1. Installationswerkzeug

Zu den Installationswerkzeugen gehören unter anderem die folgenden empfohlenen Werkzeuge. Bitte verwenden Sie bei Bedarf weitere Hilfswerkzeuge am Aufstellungsort.





П Gummihammer





Inbusschlüssel

Schrumpfschlauch





3.2.2. Vorgehensweise bei der Montage

1. Bringen Sie die Halterung mit Hilfe eines Gradienten waagerecht an der Wand an und markieren Sie die vier Löcher an der Wand.

Hinweis: Reservieren Sie bei Bedarf an der Unterseite des Wechselrichters genügend Abstand für die Verlegung der Metallkabelkanäle.





- 2. Bringen Sie die Halterung an der Wand an.
 - ① Bohren Sie vier Löcher an den markierten Stellen an der Wand.

 - ③ Richten Sie die Löcher in der Halterung an den Bohrlöchern in der Wand aus.

④ Bringen Sie die Schrauben an.



den Wechselrichter zu sichern.



HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG

② Verwenden Sie einen Gummihammer, um die Kunststoff-Spannbolzen in die Löcher zu stecken.

3. Setzen Sie den Wechselrichter vorsichtig in die Montagehalterung ein. Ziehen Sie die Schrauben fest, um





4.1. Sicherheitshinweise

Der elektrische Anschluss darf nur von Fachleuten vorgenommen werden. Bitte beachten Sie, dass der Wechselrichter ein Gerät mit Doppelstromversorgung ist. Vor dem Anschließen müssen die Techniker die erforderliche Schutzausrüstung verwenden, einschließlich Isolierhandschuhe, Isolierschuhe und Schutzhelm.

•	Lebensgefahr durch möglichen Brand oder St
•	Installieren Sie den Wechselrichter nicht in der
•	Lebensgefahr durch möglichen Brand oder St
•	Wenn das Gerät eingeschaltet wird, sollte es o
•	Die direkte Verbindung zwischen dem Wechse
	Übereinstimmung mit den lokalen und nationa
•	Die PV-Anlagen erzeugen eine tödliche Hochs

Jede unsachgemäße Bedienung beim Anschließen der Kabel kann zu Schäden am Gerät oder zu Verletzungen führen,

4.2. Anschluss



ELEKTRISCHER ANSCHLUSS



HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG



romschlag.

Nähe von brennbaren oder explosiven Gegenständen.

romschlag.

den nationalen Vorschriften und Bestimmungen entsprechen.

elrichter und Hochspannungsnetzen muss von qualifizierten Technikern in

len Normen und Vorschriften für das Stromnetz vorgenommen werden.

spannung, wenn sie dem Sonnenlicht ausgesetzt sind.

HINWEIS

Code	Bezeichnung	Beschreibung
А	DC-SCHALTER	Gleichstrom (DC) Schalter. Sie können ihn in die
		Position AUS oder EIN schalten.
В	MPPT1	PV-Eingang
С	MPPT2	PV-Eingang
D	MPPT3	PV-Eingang
E	BAT1+, BAT1-	Akku-Eingang
F	BAT2+, BAT2-	Akku-Eingang
G		Erdung
Н	4G/WLAN-Anschluss	WLAN/4G/Ethernet
1	LAN/CAN/PART/EMS/RS485/MESSUHR/DRMs	Kommunikationsanschluss
J	SICHERUNG	Sicherungs-Lasten
К	STROMNETZ	STROMNETZ

4.4. Montage des AC-seitigen elektrischen Anschlusses

4.4.1. Installieren Sie einen Schutzschalter

Installieren Sie aus Gründen der Betriebssicherheit und der Einhaltung der Vorschriften einen Leitungsschutzschalter zwischen dem Netz und dem Wechselrichter.

Wechselrichter-Typ	Empfohlene Schalter-Spezifikation	
H2-(10K-20K)-(T2,T3)	50 A	
H2-(25K-30K)-T3	63 A	
Hinweis: Schließen Sie nicht mehrere Wechselrichter an einen AC-Schutzschalter an.		

Durch die Installation eines Schutzschalters kann der Wechselrichter schnell und sicher vom Netz getrennt werden, wenn der integrierte Leckstromdetektor des Wechselrichters feststellt, dass der Leckstrom die Begrenzung überschreitet.

4.4.2. Installation eines FI-Schutzschalters (optional)

Ein externer Fehlerstromschutzschalter (RCD) ist nicht erforderlich, da der Wechselrichter mit einem integrierten Fehlerstromüberwachungsgerät (RCMU) ausgestattet ist. Wenn der externe FI-Schutzschalter jedoch gemäß den örtlichen Vorschriften installiert werden muss, kann entweder ein FI-Schutzschalter vom Typ A oder B mit einem Aktionsstrom von 300 mA installiert werden.

4.4.3. Anschluss des Netzes und der Notstromversorgung

Voraussetzung

Wählen Sie die Kabel gemäß der untenstehenden Spezifikation aus. Sie können die Auswahl des Durchmessers des Wechselstromkabels (AC) für die lange Netzanschlussstrecke verstärken.

T	Kabel-Querschnittsfläche (mm²)		
Тур	Bereich	Empfohlen	
H2-(10K-30K)-(T2,T3)	10 - 16	16	
Zusätzliche Querschnittsfläche des Erdungskabels (mm²): 8			

Vorgehensweise

4.3. Erdung



- 1. Öffnen Sie die wasserdichte Abdeckung, lösen Sie die Mutter der Kabelverschraubung an der wasserdichten Abdeckung und führen Sie das AC-Kabel durch die wasserdichte AC-Bohrung ein.
- 2. Schließen Sie die Kabel an die Leiter L1, L2, L3, N und PE an. Befestigen Sie die wasserdichte Abdeckung am Wechselrichter.



4.5. Montage der Kommunikationsverbindung







Führen Sie das Kommunikationskabel durch die wasserdichte Kabelverschraubung und schließen Sie es an den entsprechenden Anschluss an.Ziehen Sie die Schrauben an, um die wasserdichte Abdeckung am Wechselrichter zu befestigen. (Schraube M4 x 10mm; 0,6-0,8 N·m)



4.6. Anschließen des BMS

Über diese Aufgabe

Voraussetzung

- wurde installiert.
- Das BMS ist ausgeschaltet. ٠
- Bereiten Sie die Kabel gemäß der untenstehenden Spezifikation vor: •



٠ Minuskabel an den Minus-Anschluss BAT- des Akku-Kontrollgeräts.

Vorgehensweise

- 2. auf einer Länge von 8 bis 10 mm von einem Kabelende zu entfernen.



Kabelenden zu verbinden.



HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG

Das Akku-Management-System (BMS) (einschließlich der Batteriesteuereinheit und der Akkupacks)

bel-Querschnittsfläche (mm²)		
	Empfohlen	
	8	

Das Pluskabel wird an den Plus-Anschluss BAT+ des Akku-Kontrollgeräts angeschlossen, das

1. Nehmen Sie die wasserdichte Abdeckung aus dem Zubehörbeutel und schneiden Sie Löcher in den Gummistopfen. Führen Sie das Plus- und das Minuskabel durch die Löcher.

Verwenden Sie bei beiden Kabeln einen Schraubendreher mit 3 mm breiter Klinge, um die Isolierschicht

3. Stecken Sie die Kabelenden in die entsprechenden Hülsen. Verwenden Sie eine Crimpzange, um die

Stecken Sie die montierten Kabelenden in die blauen Plus- und Minus-Akku-Steckverbindungen. Ziehen 4. Sie die Kabel dann vorsichtig nach hinten, um sicherzustellen, dass sie fest verbunden sind.





Ziehen Sie die Muttern an den Plus- und Minus-Kabelsteckverbindungen fest. 5.





6. Schließen Sie die Kabel an die Anschlüsse BAT+ und BAT- des Wechselrichters an.



4.7. Montage des elektrischen Anschlusses auf der PV-Seite

Über diese Aufgabe

- ٠
- ٠



Voraussetzung

- ٠
- Wählen Sie die Kabel gemäß der untenstehenden Spezifikation aus. ٠

Leiterquerschnitt der Kabel (mm²)		Leitungsmaterial	
Umfang Empfohlener Wert		Mehradriges Kupferkabel für den	
4,0 - 6,0 4,0		Außenbereich, das 1.000 V DC entspricht	

- Minus-Steckverbindung an die Minus-Seite der Solarmodule.
- Der DC-Schalter des Wechselrichters befindet sich in der Position AUS •



Hinweis Der Wechselrichter darf nicht mit funktional geerdeten PV-Anlagen verwendet werden.

Eine Plus-Steckverbindung und eine Minus-Steckverbindung befinden sich im Zubehörbeutel.



Die PV-Anlage ist richtig gegen Erde isoliert, bevor sie an den Wechselrichter angeschlossen wird.

Bitte schließen Sie die Plus-Steckverbindung an die Plus-Seite der Solarmodule an, und die

Vorgehensweise

-- Ende

- 1. Führen Sie das Plus- und das Minuskabel durch das Loch in der wasserdichten Abdeckung.
- 2. Entfernen Sie mit einem 3-mm-Schraubendreher mit breiter Klinge die Isolierschicht auf einer Länge von 8 bis 10 mm von einem Ende jedes Kabels.



- 3. Stecken Sie die Kabelenden in die Hülsen. Verwenden Sie eine Crimpzange, um die Kabelenden zu verbinden.
- Stecken Sie die montierten Kabelenden in die Plus- und Minus-Steckverbindungen. Ziehen Sie die Kabel 4. vorsichtig nach hinten, um einen festen Anschluss sicherzustellen.





Die Verschlussschrauben an den Plus- und Minus-Steckverbindungen festziehen. 5.



Stecken Sie die Plus- und Minus-Kabelsteckverbindungen in die Plus- und Minus-PV-Anschlüsse des 6. Wechselrichters, Wenn Sie ein "Klick"-Geräusch hören, sind die Kabel fest verbunden.



4.8. Installieren des Kommunikationsmoduls



der Mutter.

1. An den 4G/WLAN-Anschluss kann entweder ein eSolar 4G-Modul, ein eSolar WLAN-Modul oder ein eSolar AIO3-Modul angeschlossen werden. Einzelheiten zum Betrieb finden Sie in der Dokumentation, die im Lieferumfang des Moduls enthalten ist, oder unter https://www.saj-electric.com/ zum Herunterladen.

4.9. Erdschlussalarm

Dieser Wechselrichter entspricht der IEC 62109-2 Klausel 13.9 für die Überwachung von Erdschlussalarmen. Wenn ein Erdschlussalarm auftritt, leuchtet das Ringlicht auf dem LED Modul des Wechselrichters auf und ein Fehlercode <31> kann in der eSAJ Home App angesehen werden.

HINWEIS: Der Wechselrichter darf nicht mit funktional geerdeten PV-Anlagen verwendet werden.

Stecken Sie das Kommunikationsmodul in den 4G/WLAN-Anschluss und sichern Sie das Modul durch Drehen

4.10. Systemanschluss

Der Systemanschluss in Australien und Neuseeland ist wie folgt.

- Aus Sicherheitsgründen müssen die Nullleiter (N) der Netz- und Notstromversorgung miteinander verbunden werden.
- Der PE-Anschluss des SICHERUNGS-Anschlusses ist nicht angeschlossen.
- Der E-BAR und der N-BAR müssen kurzgeschlossen werden.





Der Systemanschluss für das Netzsystem ohne besondere Anforderungen ist wie folgt.

Hinweis: Die PE-Leitung der Sicherung und die Erdungsschiene müssen richtig geerdet sein. Andernfalls kann die Sicherungsfunktion während eines Stromausfalls inaktiv sein.

4.11. System-Anwendungsdiagramm

4.12. AFCI

Der Wechselrichter ist mit einem Lichtbogenfehler-Schaltkreisunterbrecher (AFCI) ausgestattet. Mit dem AFCI-Schutz kann der Wechselrichter bei einem Lichtbogensignal auf der DC-Seite aufgrund der Alterung des Kabels oder eines Wackelkontakts den Strom kurz erkennen und abschalten, um einen Brand zu verhindern, wodurch die PV-Anlage sicherer läuft.

Stromwandlerleitung	Entsprechender Anschluss in der Messuhr
IA (weiß)	13
IA (blau)	14
IB(weiβ)	16
IB (blau)	17
IC(weiß)	19
IC (blau)	21



5.1. Starten des Wechselrichters

Voraussetzung

- Der Schutzschalter auf der AC-Seite ist richtig angeschlossen. •
- Der DC-Schutzschalter ist richtig angeschlossen (falls zutreffend). •

Vorgehensweise

- Entriegeln Sie den DC-Schalter und schalten Sie ihn ein. 1.
- Schalten Sie den Akku-Schalter ein (falls zutreffend). 2.
- Schalten Sie den Schutzschalter auf der Netzseite ein.
- 4. Kapitel 6 "Inbetriebnahme".
- 5. Wechselrichter richtig funktioniert.

5.1.1. Einführung in die LED-Anzeigen

STARTEN UND

HERUNTERFAHREN







- Konfigurieren Sie die Initialisierungseinstellungen in der eSAJ Home App. Einzelheiten finden Sie in

Überprüfen Sie den Status der LED-Anzeige auf dem Wechselrichterpanel, um sicherzustellen, dass der

LED-Anzeige	Status	Beschreibung	
0	LED aus	Wechselrichter ausgeschaltet	
0	Langsam blinkend	Wechselrichter befindet sich im Ausgangszustand oder in Standby-Modus	
0	Stetig	Wechselrichter funktioniert richtig	
0	Langsam blinkend	Wechselrichter führt ein Upgrade durch	
0	Stetig	Wechselrichter arbeitet nicht richtig	
	Stetig	Import von Strom aus dem Stromnetz	
	Ein 1 Sekunde, Aus 1 Sekunde	Exportieren von Strom ins Stromnetz	
System	Ein 1 Sekunde, Aus 3 Sekunden	Kein Import und Export von Strom	
	Aus	Stromnetzunabhängig	
	Stetig	Akku entlädt sich	
	Ein 1 Sekunde, Aus 1 Sekunde	Akku wird geladen	
Akku	Ein 1 Sekunde, Aus 3 Sekunden	Ladestand niedrig	
	Aus	Akku ist getrennt oder inaktiv	
	Stetig	Angeschlossen an das Stromnetz	
畫	Ein 1 Sekunde, Aus 1 Sekunde	Rückwärtszählen bis zum Anschluss an das Stromnetz	
STROMNETZ	Ein 1 Sekunde, Aus 3 Sekunden	Das Netz arbeitet nicht richtig	
	Aus	Kein Stromnetz	
PV	Stetig	PV-Anlage funktioniert richtig	
	Ein 1 Sekunde, Aus 1 Sekunde	PV-Anlage arbeitet nicht richtig	
	Aus	PV-Anlage ist nicht in Betrieb	
	Stetig	AC-seitige Last funktioniert richtig	
Sicherung	Ein 1 Sekunde, Aus 1 Sekunde	AC-seitige Last überlastet	
Sicherung	Aus	AC-Seite ist ausgeschaltet	

LED-Anzeige	Status	Beschreibung
	Stetig	Die Kommunikation zwischen BMS und Messuhr ist gut
Ø	Ein 1 Sekunde, Aus 1 Sekunde	Die Messuhrkommunikation ist gut, die BMS-Kommunikation ist unterbrochen
	Ein 1 Sekunde, Aus 3 Sekunden	Die Messuhrkommunikation ist unterbrochen, die BMS-Kommunikation ist gut
Kommunikation	Aus	Sowohl die Messuhr- als auch die BMS-Kommunikation ist unterbrochen
	Stetig	Angeschlossen
(م) ا	Ein 1 Sekunde, Aus 1 Sekunde	Beim Anschließen
Cloud	Aus	Getrennt

5.2. Abschalten des Wechselrichters

Automatische Abschaltung

Der Wechselrichter schaltet sich automatisch ab, wenn alle folgenden Bedingungen erfüllt sind:

- Mindesteingangsleistungsschwelle des Wechselrichters liegt.
- •

Manuelle Abschaltung

Um den Wechselrichter manuell abzuschalten, gehen Sie wie folgt vor:

- 1. PV-Seite: Schalten Sie den DC-Schalter des Wechselrichters aus.
- 2. Akkuseite: Schalten Sie den Schalter für den Akku aus.
- 3. AC-Seite: Schalten Sie den Schutzschalter auf der AC-Seite aus.

Hinweis: Wenn mehrere Wechselrichter angeschlossen sind, schalten Sie die jeweiligen Schutzschalter aus, bevor Sie den Hauptschutzschalter ausschalten.

• Die Intensität des Sonnenlichts ist während des Sonnenaufgangs und des Sonnenuntergangs unzureichend oder wenn die Ausgangsspannung der Photovoltaikanlage unter der

Der Akku importiert oder exportiert keinen Strom vom oder zum Wechselrichter.

• Das Netz importiert oder exportiert keinen Strom vom oder zum Wechselrichter.

6.1. Installation der eSAJ Home App

Die eSAJ Home App kann sowohl für die Nah- als auch für die Fernüberwachung verwendet werden. Sie unterstützt Bluetooth/4G oder Bluetooth/WLAN zur Kommunikation mit dem Gerät.

Suchen Sie auf Ihrem Mobiltelefon im App-Store nach "eSAJ Home" und laden Sie die App herunter.

6.2. Bei der App anmelden und die Initialisierungseinstellungen durchführen

Vorgehensweise



INBETRIEBNAHME



1. Öffnen Sie die App und tippen Sie auf das Drei-Punkte-Symbol 🚥 in der oberen rechten Ecke.

2. Stellen Sie die Sprache auf Deutsch und den Netzwerkknoten auf Übersee-Knoten.

- 3. Wenn Sie noch kein Konto haben, registrieren Sie sich zuerst.
 - a. Tippen Sie auf Registrieren. Wählen Sie, ob Sie Eigentümer, Installateur oder Händler sind.
 - b. Folgen Sie den Anweisungen auf dem Bildschirm, um die Registrierung abzuschließen.
- 4. Verwenden Sie das Konto und das Passwort, um sich bei der App anzumelden.
- 5. Gehen Sie zur **Werkzeugschnittstelle** und wählen **Sie Fernkonfiguration**. Tippen Sie auf **Bluetooth** und aktivieren Sie die Bluetooth-Funktion auf Ihrem Mobiltelefon. Tippen Sie dann auf Weiter.
- 6. Wählen Sie Ihren Wechselrichter entsprechend Ihrem Wechselrichter SN. Tippen Sie auf den Wechselrichter, um die Wechselrichtereinstellungen aufzurufen.
- Schließen Sie die Wechselrichtereinstellungen ab, indem Sie den Anweisungen auf dem Bildschirm folgen.

Beispiel:

0:02 😬 🕤	10:03 🖭 🗢 🖿	10:03
Parallel connection setting	< Battery Brand	<
rallel mode	Battery Brand	Strong charge a charge power
Off	SAJ	Discharge Curre Value
		Charge Current
		Battery On-Grid Capacity Lower
		Lower limit of b charging capac grid)
		Battery Charge Upper Limit
Off 🗸	No Battery	
On-grid parallel	Lead Acid	
Backup parallel	PYLON SC0500	
On-grid & backup parallel	SAJ 🗸	Prev
0:03 😬 🕤	10:03 👥 🕫 🔳	10:04
Testing device	< Testing device	<
rid type	Grid type	Wiring
Single-Phase v	Single-Phase v	No meter, n
io not connect 120V load to 240V single-phase grid BU Backup Type	Do not connect 120V load to 240V single-phase grid SBU Backup Type	
Whole house backup	Whole house backup ~	System Sche
Viring	Wiring	_
Please select v	No meter, no CT	
	System Schematic	•
	, _	
Next Step	Printer Ö	Battery
Whole house backup	Battery	

No meter, no CT

Partial backup



10:04	···!! 🗢 🔳		10:06	
Working Mo	odes	initialization	< Initialization	< initialization
100 (11.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1		Country	Country	Country
Power Supply)		Portugal	Portugal	Portugal
		Grid Compliance	Grid Compliance	Grid Compliance
Working Modes	Save	EN50438-DF	EN50438-DF ~	EN50438-DF
Self-Consumption Mode	~	Inverter Time	Inverter Time	Inverter Time
Self-Consumption Mode: Power be first supplied to the load and	generated by PV will then to the battery	2023-09-01 09: 🛗 Auto Time Sync	2023-09-01 09: 🔠 Auto Time Sync	2023-09-01 09: া Auto Time Sync
before exporting the remaining p	power to the grid.	Inverter SN	Inverter SN	Inverter SN
				Please wait
Cancel	ОК		Cancel OK	Please wait
Cancel	ОК		Cancel OK	Please wait
Cancel	ОК		Cancel OK	Please wait
Cancel Self-Consumptio	OK on Mode		Cancel OK UK Haly Portugal	Please wait
Cancel Self-Consumption Back-up Md	OK on Mode ode	Next Step	Cancel OK Unic Italy Portugal China	Next Step

🛞 🖬 🕍 half 🖾 🚸

Running Status 🥥

Event Info

Device Info

Running Info

0.02A

0.01A

0.084

Lithium Batter

Remaining SOC

0.12A

0.13A

501

10:05	·:!! 🗢 🔳	4:53 PM 0.2	KB/s & O	
Initial	lization	<	Dev	ice I
Country		CD Bluetoot	n:BlueLink:0	5838
Portugal		SN:	time training	-
Grid Compliance		Basic Info	Run	ning I
EN50438-DF				
Inverter Time		5W		~
2023-09-01 09:	Auto Time Sync			T
Inverter SN				-
Modified success	fully. Please confirm ameters have been			9
mod	dified.	Discharging		
		SOC:10.90	%	12
G	ot it	280A	h -	
		1291	N	
				0W
		PV Info		
		PV1	49.2V	
		PV2	48.7V	
		PV3	48.0V	
		Battery Info		
		Battery Type		Liti
		Battery Capacity	280Ah	Ren
		V/A/W	359.3V	
Next	t Step	V/A/W	359.7V	
T to A		V/A/W	360.2V	

Basic Info R
Jevice Model
1odule SN
1odule Firmware /ersion
Visplay Board /ersion
ontrol Board /ersion
lattery Capacity

6.3. Überprüfen der Wechselrichter-Einstellungen

Nach den obigen Konfigurationen sehen Sie sich die Geräteinformationen an.

- Ereignisinformationen
- Initialisierung: Land und Netzkonformität. •

4:53 PM 0.7KB/s 及 で	vice lafe	ی چې چې	4:53 PM 0.2	KB/s 反 ⑦	* 🗊	@ h2 h2	4:53 PM 0.2K	B/s Æ ℃
	vice into	65	-	Dev	ice into	\$		Devic
Bluetooth:BlueLink:0	5838	Running Status 🥏	CD Bluetooth	BlueLink:0	5838 Runn	ing Status 🥥	CD Bluetooth:	BlueLink:058
Basic Info Run	ning Info	Event Info	Basic Info	Run	ning Info	Event Info	Basic Info	Runni
Device Model		CH2-50K-T6					Event Time: 20	23-09-09 13
Module SN	м	5380J2326005838	5W				Event No.: 24 Event Content:	Master No (
Module Firmware Version		v3.003			T a		Event Time: 20	23-09-09 1
Display Board Version		V1.019)	0	-**	Event No.: 51	Lost Comm
Control Board Version		V1.100	Discharging.		T>	134W	Literit content.	and Grid M
Battery Capacity		280 Ah	SOC:10.905 280A		1		Event Time: 20 Event No.: 24	23-09-09 1
Battery control box1		0	1271		ow		Event Content:	Master No
BMS 1 SN		N/A	PV Info				Event Time: 20	23-09-09 1
BMS Software Version	1	V0.10	PV1	49.2V	0.02A	TW	Event No.: 24	
			PV2	48.7V	0.01A	ow	Event Content:	Master No
BMS Hardware Version	11	V1.00	PV3	48.0V	0.08A	3W	Event Time: 20	23-09-09 1
BAT1 SN		N/A	Battery Info			Discharging	Event No.: 55	20 07 07 1
BAT1 Software Version	n	V0.05	Battery Type Battery Capacity	280Ah	Lithium Battery Remaining SOC	10.90%	Event Content:	BMS Lost.C
BAT1 Hardware Versio	n	V1.00	VIAIW	359.3V	0.10A	38W	Event Time: 20	23-09-09 1
BAT2 SN		N/A	V/A/W	359.7V	0.12A	44W	Event No.: 95	
DAT2 Coffman \form	-	10.05	VIA/W	360.2V	0.13A	47W	Event Content:	Battery Op
DATZ SOTTWARE VERSION		VU.U5	Load Info					

6.4. Konfigurieren der Fernüberwachung

Verbinden Sie den Wechselrichter über das 4G/WLAN-Modul mit dem Internet und laden Sie die Wechselrichterdaten auf den Server hoch. Benutzer können die Betriebsdaten des Wechselrichters aus der Ferne über das eSolar Webportal oder die eSAJ Home App auf ihrem Mobiltelefon überwachen.

6.5. Auswählen des Arbeitsmodus

Wählen Sie je nach Bedarf einen der Arbeitssmodi aus:

Geräteinformationen: Grundlegende Informationen, Laufende Informationen und

In Sal 🕲 🔹	4:54 PM 0.2KB/s 反 ⑦	🕸 🖾 Sari Sari 🗷
Info (වූ	C Initialization	Sa
Running Status 🥝	Country	
Info Event Info	Australia	¥
	Grid Compliance	
16:10	AS 4777	~
id Error	Inverter Time	
19:13	2023-09-09 16:52 AU	TO TIME SYNC
ication between inverter er	Inverter SN	
9:13	Contraction and Contraction	
id Error		
9:07		
id Error		
3:21		
n		
3:21		
Circuit		

5:07 PM 0.0KB/s 疫 🕤 🔹 🚸 📾 🖬 👬	etti 🕀	(Working Modes	Save	/	Wedding Medae	
Local Connection	Û	<u>`</u>			`	Working Piodes	_
D Bluetooth:BlueLink:05838		UPS (U	ninterruptible Power Supply)		UPS (U	Ininterruptible Power Supply)	
SN:		Self-C	onsumption Mode		Self-C	onsumption Mode	6
Device Info	>	Time-o	of-use Pricing Mode		Time-0	of-use Pricing Mode	
🎋 Device Maintenance	>	Back-u	ip Mode		Back-u	up Mode	
A Initialization	>						
Battery Settings	>						
S Protection Parameters	>						
Power Adjustment	>						
Working Modes	>						
Communication Settings	>						
Export/Generation Limitation Settings	>						
>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	>						
V-Watt/V-Var	>						

Eigenverbrauchsmodus: Wenn die Sonnenenergie ausreicht, wird der von der Photovoltaikanlage erzeugte Strom zuerst an die Last geliefert, die überschüssige Energie wird im Akku gespeichert, dann wird der überschüssige Strom in das Stromnetz exportiert. Wenn die Sonneneinstrahlung nicht ausreicht, gibt der Akku Strom ab, um die Last zu versorgen.

Sicherungs-Modus: Der reservierte Sicherungs-Ladestand-Einstellwert kann angepasst werden; wenn der Ladestand-Wert des Akkus unter dem reservierten Ladestand-Wert liegt, der Akku kann nur geladen werden, bis der Ladestand-Wert den reservierten Wert erreicht, das Laden des Akkus wird beendet; wenn der Ladestand-Wert größer als der Ladestand-Einstellwert ist, der Akku wird sich wie im Eigenverbrauchsmodus verhalten.

Nutzungszeit-Modus: Die Lade- und Entladezeit des Akkus kann eingestellt werden, während der Ladezeit kann der Akku nur geladen werden, während der Entladezeit kann der Akku nur entladen werden, in der restlichen Zeit verhält sich der Akku wie im Eigenverbrauchsmodus.

6.6. Konfigurieren des Exportlimits

Es gibt zwei Methoden zur Steuerung des Exportlimits. Sie können eine der beiden Methoden verwenden, um die Einstellungen für das Exportlimit vorzunehmen.

		Ν	1ethode	2: Der (Grenzwe	ert fü	r die Ei	rzeu
		E	lektrizität					
5:07 PM 0.0KB/s 反 () 参盟 Sal	Sal 🛞	5:42 PM	1 0.0KB/s	\$ © "Call © Scal (22	5:42 PM	0.2KB/s 🛠 ම	\$1
Local Connection	Ú	<	Export Limitati	on Settings		<	Export Limitat	ion Sett
CD Bluetooth:BlueLink:05838		Export	Limitation Settings	Off	~	Export L	imitation Settings	
Device Info								
🎇 Device Maintenance								
A Initialization								
Battery Settings								
S Protection Parameters								
Power Adjustment								
Vorking Modes								
Communication Settings								
Export/Generation Limitation Setting:								
Testing device								
V-Watt/V-Var								
Parallel connection setting								
			SAVI	:			Enable	÷
							Off	

Stromnetz.

6.7. Selbsttest (Für Italien)

Die italienische Norm CEI0-21 schreibt eine Selbsttestfunktion für alle Wechselrichter vor, die an das öffentliche Stromnetz angeschlossen sind. Während des Selbsttests prüft der Wechselrichter die Reaktionszeit auf Überfrequenz, Unterfrequenz, Über- und Unterspannung. Dieser Selbsttest soll sicherstellen, dass der Wechselrichter in der Lage ist, sich bei Bedarf vom Netz zu trennen. Wenn der Selbsttest fehlschlägt, kann der Wechselrichter nicht in das Netz einspeisen. Die Schritte zur Durchführung des Selbsttests sind wie folgt:

Schritt 1: Verbinden Sie ein Kommunikationsmodul (WLAN/4G/Ethernet) mit dem Wechselrichter (das Verbindungsverfahren kann im Handbuch zur Schnellinstallation der eSolar Module nachgelesen werden) Schritt 2: Wählen Sie Italien als Land und wählen Sie den entsprechenden Stromnetz-Code in den Grundeinstellungen.

HYBRID-SOLARWECHSELRICHTER BEDIENUNGSANLEITUNG

Methode 1: Die Einstellung des Grenzwerts für den Export dient zur Kontrolle des Stromexports in das

ugung dient zur Kontrolle der vom Wechselrichter erzeugten

🕸 🗈 🕄 ani 💷	5:42 PM 0.8KB/s 授 〇	20 fail 🛛 Sail 🖘
n Settings	Export Limitatio	n Settings
Off V	Export Limitation Settings	Enable \vee
	Please select the type	Total Power
	0	w
	[0 - 5000]	
	SAVE	
~		

B



Schritt 3: Sie können das gewünschte Element für den Selbsttest auswählen. Die individuelle Selbsttestzeit beträgt ungefähr 5 Minuten. Die gesamte Selbsttestzeit beträgt ungefähr 40 Minuten. Nachdem der Selbsttest abgeschlossen ist, können Sie den Testbericht speichern. Wenn der Selbsttest fehlgeschlagen ist, wenden Sie sich bitte an SAJ oder Ihren Wechselrichterlieferanten.





FEHLERBEHEBUNG



Fehlerbehebung

Code	Störung Information	Code	Störung Information
1	Master-Relais-Fehler	34	Master-Bus-Niederspannung
2	Master-EEPROM-Fehler	35	Master Stromnetz-Phasenverlust
3	Master-Hochtemperaturfehler	36	Master-PV-Hochspannung
4	Master-Niedertemperaturfehler	37	Master Inselbildung-Fehler
5	Kommunikation unterbrochen M<->S	38	Master HW Bus Hochspannung
6	GFCI-Geräte-Fehler	39	Master HW PV Hochstrom
7	DCI-Geräte-Fehler	40	Master-Selbsttest fehlgeschlagen
8	Strom Sensor-Fehler	41	Master HW Inv Hochstrom
9	Master Phase1 Hochspannung	42	Master AC SPD-Fehler
10	Master Phase1 Niederspannung	43	Master DC SPD-Fehler
11	Master Phase2 Hochspannung	44	Master Stromnetz NE Netzspannung-Fehler
12	Master Phase2 Niederspannung	45	Master Lüfter1-Fehler
13	Master Phase3 Hochspannung	46	Master Lüfter2-Fehler
14	Master Phase3 Niederspannung	47	Master Lüfter3-Fehler
15	Stromnetz Spannung 10 Min Hoch	48	Master Lüfter4-Fehler
16	Netzunabhängig Ausgangsniederspannung	49	Kommunikation zwischen Master und Messuhr unterbrochen
17	Netzunabhängig Ausgang Kurzschluss	50	Kommunikation unterbrochen M<->S
18	Master Stromnetz-Hochfrequenz	51	Kommunikation zwischen Wechselrichter und Netzmessuhr unterbrochen
19	Master Stromnetz-Niederfrequenz	52	HMI EEPROM-Fehler
20	BAT-Eingangsmodus-Fehler	53	HMI RTC-Fehler
21	Phase1 DCV Hoch	54	Akku-Managementsystem-Gerätefehler
22	Phase2 DCV Hoch	55	Akku-Managementsystem Unterbrochene Kommunikation
23	Phase3 DCV Hoch	56	Stromwandler Gerätefehler
24	Master Kein Stromnetz-Fehler	57	AFCI unterbrochen Fehler
25	Fehler beim Anschließen des DC Reverse	58	Unterbrochene Kommunikation H< ->S Fehler
26	Parallele Maschine CAN Com Fehler	59	Kommunikation zwischen Wechselrichter und PV-Messuhr unterbrochen
27	GFCI-Fehler	61	Slave Phase1 Hochspannung
28	Phase1 DCI-Fehler	62	Slave Phase1 Niederspannung
29	Phase2 DCI-Fehler	63	Slave Phase2 Hochspannung
30	Phase3 DCI-Fehler	64	Slave Phase2 Niederspannung
31	ISO-Fehler	65	Slave Phase3 Hochspannung
32	Bus-Spannungsausgleich-Fehler	66	Slave Phase3 Niederspannung
33	Master-Bus-Hochspannung	67	Slave Hochfrequenz

Code	Störung Information
68	Slave Niederfrequenz
73	Slave Kein Stromnetz-Fehler
74	Slave PV-Eingangsmodus-Fehler
75	Slave HW PV-Hochstrom
76	Slave PV-Hochspannung
77	Slave HW-Bus-Hochspannung
81	Kommunikation unterbrochen D<->C
83	Master Lichtbogengerät-Fehler
84	Master PV Modus-Fehler
85	Autorisierung läuft ab
86	DRM0-Fehler
87	Master Lichtbogen-Fehler
88	Master SW PV Hochstrom
89	Akku-Hochspannung
90	Akku-Hochstrom
91	Akku-Lade-Hochspannung
92	Akku Überlast
93	Akku Soft Verbindung Zeitüberschreitung
94	Ausgang überlastet
95	Akku offener Stromkreis-Fehler
96	Akku Entladen Niederspannung

Bitte wenden Sie sich zur Fehlerbehebung an Ihren Lieferanten.



ANHANG

8.1. Recycling und Entsorgung

Dieses Gerät darf nicht als Hausmüll entsorgt werden.

Ein Wechselrichter, der das Ende seiner Lebensdauer erreicht hat, muss nicht an Ihren Händler zurückgegeben werden; stattdessen muss er von einer zugelassenen Sammel- und Recyclingstelle in Ihrer Nähe entsorgt werden.

Wechselrichters in einem Stapel.

8.3. Garantie

8.2. Transport

Überprüfen Sie die Garantiebedingungen auf der SAJ-Website: https://www.saj-electric.com/

8.4. Kontaktaufnahme mit der Unterstützung

Guangzhou Sanjing Electric Co., Ltd.

Adresse:SAJ Innovation Park, No.9, Lizhishan Road, Guangzhou Science City, Guangdong, P.R.China.

Postleitzahl: 510663

Website: https://www.saj-electric.com/

Technische Unterstützung und Kundendienst

Tel: +86 20 6660 8588

Fax: +86 206660 8589

E-mail: service@saj-electric.com

Internationaler Vertrieb

Tel: 86-20-66608618/66608619/66608588/66600086

Fax: 020-66608589

E-mail: info@saj-electric.com

Vertrieb China

Tel: 020-66600058/66608588

Fax: 020-66608589

8.5. Warenzeichen

SAJ ist das Warenzeichen von Sanjing.

Seien Sie vorsichtig beim Transport und bei der Lagerung des Produkts. Halten Sie weniger als 5 Kartons des

Preface



TABLE OF **CONTENTS**

1.	SAFETY PRECAUTIONS	1
	1.1. Application Scope	2
	1.2. Safety	2
	1.2.1. Safety Levels	2
	1.2.2. Symbol Explanation	3
	1.2.3. Safety Instructions	3
	1.3. Safe Handling	4
2.	Product Overview	5
	2.1. General Introduction	6
	2.2. Unpacking	7
	2.3. Dimension	8
	2.4. Datasheet	9
3.	Installation Instructions	13
	3.1 Determining the Installation Position	14
	3.1.1. Installation Environment Requirements	14
	3.1.2. Installation Location Requirements	14
	3.2. Mounting Procedure	16
	3.2.1. Installation Tools	16
	3.2.2. Mounting Procedures	17
4.	Electrical Connection	10
	4.1. Safety Instructions	20
	4.2. Port	20
	4.3. Grounding	21
	4.4. Assembling the AC-side Electrical Connection	22
	4.4.1 Installing a Circuit Breaker	22

	4.4.2	. Installing an RCD (optional)
	4.4.3	. Connecting the Grid and Backup Loads
	4.5.	Assembling the Communication Connection
	4.6.	Connecting the BMS
	4.7.	Assembling the PV-side Electrical Connection
	4.8.	Installing the Communication Module
	4.9.	Earth Fault Alarm
	4.10.	System connection
	4.11.	System Application Diagram
	4.12.	AFCI
5.	Startup and Sh	utdown
	5.1.	Starting the Inverter
	5.1.1	. Introduction to the LED Indicators
	5.2.	Shutting Down the Inverter
6.	Commissioning	
	6.1.	Installing the eSAJ Home App
	6.2.	Logging In to the App and Performing the Initializatio
	6.3.	Reviewing the Inverter Settings
	6.4.	Configuring the Remote Monitoring
	6.5.	Selecting the Working Mode
	6.6.	Configuring the Export Limit
	6.7.	Self-test (For Italy)
7.	Troubleshootin	g
8.	Appendix	
	8.1.	Recycling and Disposal
	8.2.	Transportation
	8.3.	Warranty
	8.4.	Contacting Support
	8.5.	Trademark

	22
	22
	24
	26
	28
	30
	30
	31
	33
	34
	35
	36
	36
	38
	39
	40
Settings	40
	44
	44
	44
	45
	46
	49
	53
	54
	54
	54
	54
	54

SAFETY PRECAUTIONS

1.1. Application Scope

This user manual describes instructions and detailed procedures for installing, operating, maintaining, and troubleshooting of the following SAJ hybrid solar inverters:

H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2
H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3

Please read the user manual carefully before any installation, operation and maintenance and follow the instruction during installation and operation. Please keep this manual all time available in case of emergency.

Only qualified electricians who have read and fully understood all safety regulations contained in this manual can install, maintain, and repair the inverter. Operators must be aware that it is a high-voltage device.

- 1.2. Safety
- 1.2.1. Safety Levels

· DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING indicates a hazardous situation which, if not avoided, can result in death or serious injury or moderate injury.

CAUTION indicates a hazardous condition which, if not avoided, can result in minor or moderate injury.

NOTICE indicates a situation that can result in potential damage, if not avoided.



DANGER



WARNING





NOTICE

1.2.2. Symbol Explanation

Symbol	Description
4	Dangerous electrical voltage This device is directly connected to public grid, thus all work to the inverter shall only be carried out by qualified personnel.
4 Smin	Danger to life due to high electrical voltage! There might be residual currents in inverter because of large capacitors. Wait 5 MINUTES before you remove the front lid.
<u> </u>	Notice, danger! This is directly connected with electricity generators and public grid.
<u></u>	Danger of hot surface The components inside the inverter will release a lot of heat during operation. Do not touch metal plate housing during operating.
	An error has occurred. Please go to Chapter 7 "Troubleshooting" to remedy the error.
	This device SHALL NOT be disposed of in residential waste. This device SHALL NOT be disposed of in residential waste. Please go to section 8.1 "Recycling and Disposal" for proper treatments.
CE	CE Mark With CE mark & the inverter fulfills the basic requirements of the Guideline Governing Low-Voltage and Electro-magnetic Compatibility.
	RCM Mark Equipment meets safety and other requirements as required by electrical safety laws/ regulations in Australian and New Zealand.

1.2.3. Safety Instructions

 There is possibility of dying due to electrical shock and high voltage.
Do not touch the operating component of the inverter; it might result in burning or death.
 To prevent risk of electric shock during installation and maintenance, please make sure that all AC and DC terminals are plugged out.
• Do not touch the surface of the inverter while the housing is wet, otherwise, it might cause electrical shock.
Do not stay close to the inverter while there are severe weather conditions including storm, lighting, etc.
• Before opening the housing, the SAJ inverter must be disconnected from the grid and PV generator; you must wait for at least five minutes to let the energy storage capacitors completely discharged after disconnecting from power source.

, , , , , , ,
• compliance with national and local standards and
• Any unauthorized actions including modification
• The operator, third parties, the units or their prop
• The SAJ inverter must only be operated with PV
• Be sure that the PV generator and inverter are w
 The inverter will become hot during operation. Pl
operation.
• Risk of damage due to improper modifications.
 Public utility only.

any private AC equipment.	-

1.3. Safe Handling

- install, maintain, and repair the inverter.
- When the inverter is working, do not touch the internal component or cable to avoid electric shock. .
- Before replacing an internal component within the inverter, make sure that the DC switch on the inverter . is turned off and locked by a tool and the new component meets the usage requirement.
- When the inverter is working, do not plug in or out the cables. .
- Make sure the AC input voltage and current are compatible with the rated voltage and current of the . inverter; otherwise, components might be damaged, or the device cannot work properly.

WARNING

- The installation, service, recycling and disposal of the inverters must be performed by qualified personnel only in d regulations.
 - of product functionality of any form may cause lethal hazard to
 - perty. SAJ is not responsible for the loss and these warranty claims.
 - generator. Do not connect any other source of energy to the SAJ inverter.
 - vell grounded in order to protect properties and persons.

() CAUTION

Please do not touch the heat sink or peripheral surface during or shortly after

• The inverter is designed to feed AC power directly to the public utility power grid; do not connect AC output of the inverter to

Only qualified electricians who have read and fully understood all safety regulations in this manual can



PRODUCT **OVERVIEW**



2.1. General Introduction

The H2 series inverter is a hybrid photovoltaic inverter which is applicable to both on-grid and off-grid solar systems. The energy generated by the photovoltaic (PV) system will be fed to loads first, the surplus energy will charge the battery for later use, and if there is still excess more energy, it will be exported to the grid.

dependency on grid.



h

The H2 inverter can significantly improve the self-consumption rate of solar energy and lower the

2.2. Unpacking

2.3. Dimension





The documents include the user manual, quick installation guide, warranty card and packaging list.



2.4. Datasheet

Model	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2	
DC Input		<u> </u>	<u> </u>			
Max. PV Array Power [Wp]@STC	20000	24000	30000	30000	30000	
Max. DC Voltage [V]	1000					
MPPT Voltage Range [V]	180 - 900					
Rated DC Voltage [V]	600					
Start Voltage [V]	180					
Max. DC Input Current [A]	40/4	0/40	40/40	40/40/40	40/40	
Max. DC Short Circuit Current [A]	50/5	0/50	50/50	50/50/50	50/50	
No. of MPPT	:	3	2	3	2	
Number of String per MPP Tracker	2/2	2/2	2/2	2/2/2	2/2	
Battery Port Connection			I	11		
Battery Type	LiFePO4					
Battery Voltage Range [V]			180 - 800			
Max. Charging/Discharging Current [A]	2*50					
AC Output [On-grid]						
Rated AC Power [W]	10000	12000	15000	15000	20000	
Max. Apparent Power [VA]	11000	13200	16500	16500	22000	
Rated Output Current [A]@230Vac	14.5	17.4	21.8	21.8	29.0	
Max. AC Output Current to Utility Grid [A]	16.0	19.2	24.0	24.0	31.9	
Rated AC Voltage/Range [V]		3+N+PE, 220/380	, 230/400, 240/415; 1	80 - 280/312 - 485		
Rated Output Frequency/Range [Hz]	● 50: 45 - 55 ● 40: 55 - 45					
Power Factor [cos φ]			0.8 leading - 0.8 laggi	ng		
Total Harmonic Distortion [THDi]			<3%	0		
AC Input [On-grid]						
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Rated Input Frequency [Hz]		· · ·	50, 60			
Max. Input Current [A]@230Vac	28.3	28.3	28.3	28.3	37.7	
AC Output [Back-up]		I	I			
Max. Output Power [VA]	10000	12000	15000	15000	20000	
Max. Output Current [A]	14.5	17.4	21.8	21.8	29.0	
Peak Output Apparent Power [VA]	15000,3S	18000,3S	22500,3s	22500,3s	30000,3s	

Model	H2-10K-T3	H2-12K-T3	H2-15K-T2	H2-15K-T3	H2-20K-T2	
Rated AC Voltage/Range [V]	3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Rated Output Frequency/Range [Hz]	 50: 45 - 55 60: 55 - 65 					
Output THDv (@ Linear Load)			<3%			
Efficiency	I					
Max. Efficiency 98.0%						
Euro Efficiency			97.6%			
Protection	1					
Battery Input Reverse Polarity Protection			Integrated			
Over Load Protection			Integrated			
AC Short Circuit Current Protection			Integrated			
DC Surge Protection			Type II			
AC Surge Protection			Type II			
Anti-islanding Protection			Integrated			
AFCI Protection			Integrated			
Interface	1					
PV Connection			D4,MC4 (Optional)			
AC Connection			Terminal block			
Battery Connection		Quick connector				
Display			LED+App			
Communication		W	i-Fi/Ethernet/4G (Opti	onal)		
General Parameters						
Topology			Non-isolated			
Operating Temperature Range		-40°C to +	60°C (45°C and above	with derating)		
Cooling Method			Intelligent fan coolin	g		
Ambient Humidity	0-100% Non-condensing					
Altitude		4000	0m (>3000m Power De	rating)		
Noise [dBA]			<50			
Ingress Protection			IP65			
Dimensions [H*W*D] [mm]			576*659*242			
Weight [kg]			50			
Warranty [Year]	Refer to the warranty policy					
Standard	EN 62109-1/2, EN 61000-6-2/4, EN 50438, EN 50549, C10/11, IEC 62116, IEC 61727, RD 1699, RD 413, U 206006, UNE 206007, NTS, CEI 0-16, CEI 0-021, AS 4777.2, NBR 16149, NBR 16150 VDE-AR-N 4105, VI 0126-1-1				₹D 1699, RD 413, UNE ′DE-AR-N 4105, VDE	

Model	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3	
DC Input						
Max. PV Array Power [Wp]@STC	40000	45000	45000	45000	45000	
Max. DC Voltage [V]	1000					
MPPT Voltage Range [V]			180 - 900			
Rated DC Voltage [V]		600				
Start Voltage [V]			180			
Max. DC Input Current [A]			40/40/40			
Max. DC Short Circuit Current [A]			50/50/50			
No. of MPPT			3			
Number of String per MPP Tracker			2/2/2			
Battery Parameters						
Battery Type			LiFePO4			
Battery Voltage Range [V]			180 - 800			
Max. Charging/Discharging Current [A]			2*50			
AC Output [On-grid]						
Rated AC Power [W]	20000	25000	25000	29999	30000	
Max. Apparent Power [VA]	22000	25000	27500	29999	33000	
Rated Output Current [A]@230Vac	29.0	36.3	36.3	43.4	43.5	
Max. AC Output Current to Utility Grid [A]	31.9	36.3	39.9	43.4	47.9	
Rated AC Voltage/Range [V]		3+N+PE, 220/38	0, 230/400, 240/415;	180 - 280/312 - 485		
Rated Output Frequency/Range [Hz]	 50: 45 - 55 60: 55 - 65 					
Power Factor [cos φ]			0.8 leading - 0.8 lagg	jing		
Total Harmonic Distortion [THDi]	<3%					
AC Input [On-grid]						
Rated AC Voltage/Range [V]		3+N+PE, 220/38	0, 230/400, 240/415;	180 - 280/312 - 485		
Rated Input Frequency [Hz]			50, 60			
Max. Input Current [A]@230Vac	37.7	47.2	47.2	56.5	56.6	
AC Output [Back-up]		1		<u> </u>		
Max. Output Power [VA]	20000	25000	25000	29999	30000	
Max. Output Current [A]	29.0	36.3	36.3	43.4	43.5	
Peak Output Apparent Power [VA]	30000,3s	37500,3s	37500,3s	45000,3s	45000,3s	
Rated AC Voltage/Range [V]	I AC Voltage/Range [V] 3+N+PE, 220/380, 230/400, 240/415; 180 - 280/312 - 485					
Rated Output Frequency/Range [Hz]	 50: 45 - 55 60: 55 - 65 					
Output THDv (@ Linear Load)	<3%					

Model	H2-20K-T3	H2-25K-T3-BE	H2-25K-T3	H2-30K-T3-DE	H2-30K-T3		
Efficiency	ifficiency						
Max. Efficiency	98.0%						
Euro Efficiency			97.6%				
Protection							
Battery Input Reverse Polarity Protection			Integrated				
Over Load Protection			Integrated				
AC Short Circuit Current Protection			Integrated				
DC Surge Protection			Type II				
AC Surge Protection			Type II				
Anti-islanding Protection			Integrated				
AFCI Protection			Integrated				
Interface							
PV Connection			D4,MC4 (Optional)				
AC Connection			Terminal block				
Battery Connection			Quick connector				
Display	LED+App						
Communication	Wi-Fi/Ethernet/4G (Optional)						
General Parameters							
Topology			Non-isolated				
Operating Temperature Range	-40°C to +60°C (45°C and above with derating)						
Cooling Method			Intelligent fan coolir	ng			
Ambient Humidity			0-100% Non-condens	sing			
Altitude		400	00m (>3000m Power D	erating)			
Noise [dBA]	<50						
Ingress Protection	IP65						
Dimensions [H*W*D] [mm]	576*659*242						
Weight [kg]	50						
Warranty [Year]		F	Refer to the warranty p	olicy			
Standard	EN 62109-1/2, EN 61000-6-2/4, EN 50438, EN 50549, C10/11, IEC 62116, IEC 61727, RD 1699, RD 413, UNE 206006, UNE 206007, NTS, CEI 0-16, CEI 0-021, AS 4777.2, NBR 16149, NBR 16150 VDE-AR-N 4105, VDE 0126-1-1						



INSTALLATION INSTRUCTIONS

• Danger	ous to life due to potential fire or electr
• Do not	nstall the inverter near any inflammable
• This eq	ipment meets the pollution degree.
 Inappro 	priate or the harmonized installation er
 Installat 	ion directly exposed under intensive su
The inst	allation site must be well ventilated.
 The inst 	allation site must be well ventilated.

Determining the Installation Position 3.1

3.1.1. Installation Environment Requirements

- •
- The device must be installed in a place away from heat source. ٠
- ٠
- Keep the device away from children. •
- ٠
- ٠
- •

3.1.2. Installation Location Requirements

- •
- overheating.
- sideways, horizontally, or upside down.

ANGER

ity shock. or explosive items.



rironment may jeopardize the life span of the inverter light is not recommended.

The installation environment must be free of inflammable or explosive materials.

Do not install the device at a place where the temperature changes extremely.

Do not install the device at daily working or living arears, including but not limited to the following areas: bedroom, lounge, living room, study, toilet, bathroom, theater and attic.

When installing the device at the garage, please keep it away from drive way.

Keep the device from water sources such as taps, sewer pipes and sprinklers to prevent water seepage.

The product is to be installed in a high traffic area where the fault is likely to be seen.

NOTE: When installing outdoors, the height of the device from the ground should be considered to prevent the device from soaking in water. The specific height is determined by the site environment.

The equipment employs natural convection cooling, and it can be installed indoor or outdoor.

Do not expose the inverter to direct solar irradiation as this could cause power derating due to

Install the inverter vertically or backwards with the maximum angle of 15 degrees. Do not tilt it forwards,



- Choose a solid and smooth wall to ensure that the inverter can be installed securely on the wall. Make sure that the wall can bear the weight of the inverter and accessories.
- Reserve enough clearance around the inverter to ensure a good air circulation at the installation area, especially when multiple inverters need to be installed in the same area.



3.2. Mounting Procedure

3.2.1. Installation Tools

Installation tools include but are not limit tools on site if necessary.













Heat shrink tubing

> _ <



Installation tools include but are not limited to the following recommended ones. Please use other auxiliary



3.2.2. Mounting Procedures

1. Place the mounting bracket horizontally onto the wall by using a gradienter and mark the four holes on the wall.

Note: If required, reserve enough distance at the inverter bottom for installing the metal cable conduits.





- 2. Install the mounting bracket to the wall.
 - ① Drill four holes in the mark positions on the wall.

 - ④ Install the screws.





- ② Use a rubber mallet to insert the plastic expansion bolts into the holes.
- ③ Align the holes in the mounting bracket to the drilled holes in the wall.

3. Carefully mount the inverter into the mounting bracket. Tighten the screws to secure the inverter.



ELECTRICAL CONNECTION

4.1. Safety Instructions

Electrical connection must only be operated on by professional technicians. Please keep in mind that the inverter is a bi-power supply equipment. Before connection, necessary protective equipment must be employed by technicians including insulating gloves, insulating shoes and safety helmet.

•	Dangerous to life due to potential fire or electric
•	Do not install the inverter near any inflammable
•	Dangerous to life due to potential fire or electric
•	When it is powered on, the equipment should in
•	The direct connection between the inverter and
	accordance with local and national power grid s
•	The PV arrays will produce lethal high voltage w

Any improper operation during cable connection can cause device damage or personal injury

4.2. Port







Code	Name	Description
А	DC SWITCH	Direct current (DC) switch. You can turn it to OFF or ON
		position.
В	MPPT1	PV input
С	MPPT2	PV input
D	MPPT3	PV input
E	BAT1+, BAT1-	Battery input
F	BAT2+, BAT2-	Battery input
G		Grounding
Н	4G/WIFI	4G, Wi-Fi, and Ethernet
I	LAN/ CAN/ PART/ EMS/ RS485/	Communication port
	METER/ DRMs	
J	BACK-UP	Backup loads
К	GRID	Grid

4.3. Grounding



4.4. Assembling the AC-side Electrical Connection

4.4.1. Installing a Circuit Breaker

For safety operation and regulation compliance, install air circuit breaker between the grid and the inverter.

Inverter type	Recommended breaker specification			
H2-(10K-20K)-(T2,T3)	50A			
H2-(25K-30K)-T3	63A			
Notice: Do not connect multiple inverters to one AC circuit breaker.				

By installing a circuit breaker, the inverter can be disconnected from the grid quickly and safely when the integrated leakage current detector of the inverter detects that the leakage current exceeds the limitation.

4.4.2. Installing an RCD (optional)

An external residential current device (RCD) is not required since the inverter is integrated with a residential current monitoring unit (RCMU). However, if the external RCD must be installed according to the local regulations, either type A or B RCD can be installed with the action current 300 mA.

4.4.3. Connecting the Grid and Backup Loads

Prerequisite

Select cables according to the below specification. You can amplify appropriate diameter selection of the alternating current (AC) cable for the long grid-connection distance.

Time	Cable cross-sectional area (mm ²)					
Туре	Range	Recommend				
H2-(10K-30K)-(T2,T3)	10 - 16	16				
Additional grounding cable cross-sectional area (mm ²): 8						
Procedure						

1. Open the waterproof cover, loosen the nut from the cable gland on the waterproof cover, insert the AC cable through the AC waterproof hole.



2. Connect the cables to the conductors L1, L2, L3, N, and PE. Secure the waterproof cover to the inverter.



3. Tighten the nut back to the cable gland.

4.5. Assembling the Communication Connection







Thread the communication cable through the waterproof cable gland and connect to the corresponding port. Tighten screws to secure the waterproof cover to the inverter. (M4*10mm screw; 0.6-0.8 N·m)



4.6. Connecting the BMS

About this task

Prerequisite

- ٠ installed.
- The BMS is powered off. ٠
- Prepare the cables according to the below specifications:



٠

Procedure

- 1. and negative cables through the hole.
- 2. length from one cable end.



3.



The battery management system (BMS) (including the battery control unit and battery packs) has been

le Cross-sectional area (mm²)					
	Recommend				
	8				

The positive cable is connected to the positive port BAT+ of the battery control unit, and the negative cable is connected to the negative port BAT- of the battery control unit.

Get the waterproof cover from the accessory bag and cut holes in the rubber plug. Insert the positive

On both cables, use a 3-mm wide-bladed screwdriver to strip the insulation layer around 8 to 10 mm

Insert the cable ends to the corresponding sleeves. Use a crimping plier to assembly the cable ends.

4. Insert the assembled cable ends into the blue positive and negative battery connectors. Then, gently pull the cables backwards to ensure that they are firmly connected.

4.7. Assembling the PV-side Electrical Connection About this task



٠



Prerequisite

- •
- Select cables according to the below specification. ٠

Conductor cross-sectiona	I area of cables (mm²)	Conductor material
Scope	Recommended value	Outdoor multi-core copper wire cable,
4.0 - 6.0 4.0		complying with 1000 VDC

- connected to the negative side of the solar panels.
- The DC switch on the inverter is in OFF position. •







Tighten the nuts on the positive and negative cable connectors. 5.



6. Connect the cables to the BAT+ and BAT- ports on the inverter.



-- End

A positive connector and a negative connector are provided in the accessory bag.



The PV array is properly insulated to ground before it is connected to the inverter.

• The positive cable is connected to the positive side of the solar panels, and the negative cable is

Procedure

- 1. Insert the positive and negative cables through the hole in the waterproof cover.
- 2. Use a 3-mm wide-bladed screwdriver to strip the insulation layer around 8 to 10 mm length from one end of each cable.



- 3. Insert the cables ends to the sleeves. Use a crimping plier to assembly the cable ends.
- Insert the assembled cables ends into the positive and negative connectors. Gently pull the cables 4. backwards to ensure firm connection.





5. Tighten the lock screws on the positive and negative cable connectors.



Connect the positive and negative cables connectors into the positive and negative PV ports on the 6. inverter. After you hear a "click" sound, the cables are firmly connected.



4.8. Installing the Communication Module



the nut.

1. Either an eSolar 4G module, eSolar Wi-Fi module, or eSolar AIO3 module can be connected to the 4G/WIFI port. For operation details, refer to the documentation shipped in the module package or go to https://www.saj-electric.com/ for downloads.

4.9. Earth Fault Alarm

the eSAJ Home App.

NOTE: The inverter cannot be used with functionally earthed PV arrays.

Plug in the communication module to 4G/WIFI port and secure the module by rotating

This inverter complies with IEC 62109-2 clause 13.9 for earth fault alarm monitoring. If an earth fault alarm occurs, the ring light on the inverter LED panel will be lit up in red and an error code <31> can be viewed on

4.10.System connection

The system connection in Australia and New Zealand is as below.

- For safety, the neutral (N) cables of the grid and backup-load sides must be connected together.
- The PE terminal of the BACK-UP port is not connected.
- The E-BAR and the N-BAR must be short-circuited.







The system connection for the grid system without special requirements is as below.

Note: The backup PE line and earthing bar must be grounded properly. Otherwise, backup function may be

4.12.AFCI

The inverter is equipped with arc-fault circuit interrupter (AFCI). With AFCI protection, when there is an arc signal on the DC side due to aging of the cable or loose contact, inverter can quickly detect and cut off the power to prevent fire, making the PV system run more safely.

4.11.System Application Diagram

CT wire	Corresponding meter	port	in	the
IA (white)	13			
IA (blue)	14			
IB (white)	16			
IB (blue)	17			
IC (white)	19			
IC (blue)	21			



STARTUP AND SHUTDOWN

5.1. Starting the Inverter

Prerequisite

- The circuit breaker on the AC side is connected properly. ٠
- The DC circuit breaker is connected properly (if applicable). ٠

Procedure

- Unlock the DC switch and turn it on. 1.
- Turn on the battery switch (if applicable). 2.
- Turn on the circuit breaker on the grid side. 3.
- 4. "Commissioning".
- 5.

5.1.1. Introduction to the LED Indicators



Configure the initialization settings on the eSAJ Home App. For details, refer tp Chapter 6

Check the LED indicator status on the inverter panel to ensure that the inverter is running properly.

LED indicator	Status	Description
0	LED off	Inverter power off
0	Breathing	Inverter is at initial state or standby state
0	Solid	Inverter running properly
0	Breathing	Inverter is upgrading
0	Solid	Inverter is not working properly
\frown	Solid	Importing electricity from grid
	On 1s, off 1s	Exporting electricity to grid
	On 1s, off 3s	Not importing and exporting at all
System	Off	Off-grid
<u> </u>	Solid	Battery is discharging
	On 1s, off 1s	Battery is charging
_	On 1s, off 3s	SOC low
Battery	Off	Battery is disconnected or inactive
æ	Solid	Connected to grid
蛰	On 1s, off 1s	Counting down to grid connection
	On 1s, off 3s	Grid is not working properly
Grid	Off	No grid
	Solid	PV array is running properly
	On 1s, off 1s	PV array is not working properly
PV	Off	PV array is not operating
	Solid	AC side load is running properly
E	On 1s, off 1s	AC side load overload
Backup	Off	AC side is turned off
	Solid	Both BMS and meter communication are good
(\mathbf{Q})	On 1s, off 1s	Meter communication is good, BMS communication is lost
	On 1s, off 3s	Meter communication is lost, BMS communication is good

LED indicator	Status	
Communication	Off	Both meter an
$\widehat{}$	Solid	Connected
\sim	On 1s, off 1s	Connecting
Cloud	Off	Disconnected

5.2. Shutting Down the Inverter

Automatic shutdown

The inverter will be automatically shut down when all the following conditions are met:

- •

Manual shutdown

To manually shut down the inverter, perform as follows:

- 1. **PV side:** Turn off the DC switch on the inverter.
- 2. Battery side: Turn off the battery switch.
- 3. AC side: Turn off the circuit breaker on the AC side.

circuit breaker.

Description

d BMS communication are lost

• The solar light intensity is insufficient during sunrise and sunset or when the output voltage of the photovoltaic system is lower than the minimum input power threshold of the inverter.

The battery is neither importing nor exporting the electricity from or to the inverter.

• The grid is neither importing nor exporting the electricity from or to the inverter.

Note: If multiple inverters are connected, turn off the their own circuit breakers before turning off the main

()

COMMISSIONING

6.1. Installing the eSAJ Home App

The eSAJ Home App can be used for both nearby and remote monitoring. It supports Bluetooth/4G or Bluetooth/Wi-Fi to communicate with the device.

On your mobile phone, search for "eSAJ Home" in the App store and download the App.

6.2. Logging In to the App and Performing the Initialization Settings

Procedure

- 1. Open the App and tap on the three-dot icon **....** on the top right corner.
- 2. Set the Language to English and Network Node to Overseas Node.



- 3. If you do not have an account, register first.
 - a. Tap **Register**. Choose whether you are an owner or an installer or distributor.
 - b. Follow the instructions on the screen to complete the registration.
- 4. Use the account and password to log in to the App.
- 5. Go to the **Tool** interface and select **Remote Configuration**. Tap on **Bluetooth** and enable the Bluetooth function on your mobile phone. Then, tap on **Next**.
- 6. Choose your inverter according to your inverter SN. Tap on the inverter to enter inverter settings.
- 7. Complete the inverter settings by following the instructions on the screen.

Example:



	! ≎ ■	-	10:03		:!!! � ■)
Battery Se	ttings		<	Testing devi	ice
d equal	20 %		Grid type		
it Limit	50 A		Single-Phase	,	~
	[0~50]		SBU Backup	Type	single-phase grid
imit	[0-60] A		Whole house	backup	
Discharge imit	20 %		Wiring		
tery ince(off-	10 %		Please select		
apacity	100 %				
				Next Step	
			Single-Phas	se	~
us	Next Step		Split Phase		
					_
		D	10:04		:!! �∎
Testing d	levice		< Ex	port Limitatior	Settings
			Export Limita Function	tion Off	\sim
СТ	Ψ.				
natic					
PV Array)				
		⇒			
	\square				
Back-up Load					
Next S	Step			Next Ste	p.

SA.

10:04	::!! � ■)	10:05 🗰 🗢 🔳	10:06	
Working Mode	s	< Initialization	< Initialization	< Initialization
		Country	Country	Country
UPS (Uninterruptible Power Supply)		Portugal -	Portugal	Portugal
	_	Grid Compliance	Grid Compliance	Grid Compliance
Working Modes	Save	EN50438-DF -	EN50438-DF	- EN50438-DF
Self-Consumption Mode	~	Inverter Time	Inverter Time	Inverter Time
Self-Consumption Mode: Power gen be first supplied to the load and then	erated by PV will to the battery	2023-09-01 09: 🛗 Auto Time Sync	2023-09-01 09: 🔠 Auto Time Syn	c 2023-09-01 09: 🖽 Auto Time Sy
before exporting the remaining powe	er to the grid.	Inverter SN	Inverter SN	Inverter SM
			10000	
				Modifying Please wait
Cancel	ОК		Cancel OI	ĸ
			Italy	
Self-Consumption M	Node		Portugal	
Back-up Mode		Next Step	China	Next Step
Time-based mod	ie		Thailand	
10:05		4:53 PM 0.2KB/s 反 〇		
Initialization		C Device Info O		
Country		CD Bluetooth:BlueLink:05838		
Portugal		Running Status 🥥		
Grid Compliance		Basic Info Running Info Event Info		
Ond Compliance				
EN50438-DF				
EN50438-DF		SW		

6.3. Reviewing the Inverter Settings

٠

.

After the above configurations, view the device information.

4:53 PM 0.7KB/s 疫 包	i - + i	🕑 lhë lhë 🖸	4:53 PM 0.28	(B/s 反 句	* 🗃 🗄	€ In‰ In	4:53 PM 0.2KE	3/s 反 ①
< р	evice Info	\$	<	Dev	ice Info	©	<	Devic
CD Bluetooth:BlueLink	:05838		CD Bluetooth	BlueLink:0	5838		CD Bluetooth:B	lueLink:058
SN:	Ru	unning Status 🥑	SN:		Runnir	ig Status 🥥	SN:	
Basic Info R	unning Info	Event Info	Basic Info	Run	ning Info E	event Info	Basic Info	Runnir
Device Model		CH2-50K-T6					Event Time: 202	23-09-09 13
Module SN	M538	0J2326005838	5W		\sim		Event No.: 24 Event Content:	Master No (
Module Firmware Version		v3.003			T		Event Time: 202	23-09-09 13
Display Board Version		V1.019)	0		Event No.: 51	Lost Comm
Control Board Version		V1.100	Discharging.		>	134W	crent content.	and Grid Me
Battery Capacity		280 Ah	SOC:10.90% 280AF		17		Event Time: 202	23-09-09 1
Battery control box1		0	129W		ow		Event Content:	Master No
BMS 1 SN		N/A	PV Info				Event Time: 202	23-09-09 13
			PV1	49.2V	0.02A	TW	Event No.: 24	
BMS Software Versio	on1	V0.10	PV2	48.7V	0.01A	ow	Event Content:	Master No 0
BMS Hardware Versi	on1	V1.00	PV3	48.0V	0.08A	3W		
BAT1 SN		N/A	Battery Info		D	ischarging	Event Time: 202	23-09-09 11
			Battery Type		Lithium Battery		Event No.: 55	BMS Lost C
BAT1 Software Versi	on	V0.05	Battery	280Ah	Remaining SOC	10.90%	Event Content:	DIFIS LOST.CO
BAT1 Hardware Versi	ion	V1.00	VIA/W	359.3V	0.10A	38W	Event Time: 202	23-09-09 11
BAT2 SN		N/A	VIA/W	359.7V	0.12A	44W	Event No.: 95	
DATO Colleges March		10.05	VIA/W	360.2V	0.13A	47W	Event Content:	Battery Ope
BAIZ SOTWARE VERS	ion	v0.05	Load Info					
							F	~ ~ ~ ~ ~

6.4. Configuring the Remote Monitoring

Connect the inverter to the Internet by using the 4G/Wi-Fi module and upload the inverter data onto the server. Users can monitor the inverter operating information remotely from the eSolar Web portal or the eSAJ Home App in their mobile phones.

6.5. Selecting the Working Mode

Select one of the working modes based on your needs:

Inverter SN

Modified successfully. Please confirm whether the parameters have been modified.

Got it

⇒

SOC:10.90%

0.02A

0.014 0.084

0.12A

0.13A

47W

49.2V

360.2V

PV Info

PV1

PV2

Battery Typ Battery

Capacity V/A/W V/A/W

V/A/W

Device info: Basic Info, Running Info, and Event Info

Initialization: Country and Grid Compliance.

🚸 🖾 "ant Sant 🕢	4:54 PM	0.2KB/s 尽 (3)	تک اند؛ اند؛ 🖾 🚸	
Info (ô	3 <	Initializat	ion Sav	B
B Running Status	Count	ry		
Info Event Info	Austra	əlia	×	
	Grid C	ompliance		
46:10	AS 47	77	*	
id Error	Inverte	er Time		
39:13	2023	8-09-09 16:52	AUTO TIME SYNC	
nication between inverter er	Inverte	er SN		
39:13	1.00	and the second	i	
id Error				
39:07				
id Error				
33-21				
nn				
33-21				
Circuit				

5:07 PM 0.0KB/s 🦧 🎯	🚸 🖾 Cal Sal 🏵	<	Working Modes	Save	(Working Modes	Save
Local Connect	tion ()	`		-	`		-
Bluetooth:BlueLink:05838		UPS (U	ninterruptible Power Supply)		UPS (U	ninterruptible Power Supply)	
SN:		Self-C	onsumption Mode		Self-C	onsumption Mode	1
Device Info	>	Time-o	f-use Pricing Mode		Time-o	of-use Pricing Mode	
S Device Maintenance	>	Back-u	p Mode		Back-u	ip Mode	
Initialization	>						
Battery Settings	5						
Protection Parameters	>						
Power Adjustment	5						
Working Modes	>						
Communication Settings	>						
Export/Generation Limitation	on Settings >						
Testing device	>						
V-Watt/V-Var	2						
Parallel connection setting							

5:07 PM 0.0KB/s 恣 🕲 🔹 🕯 🖬 🖬	Call (III)	5:42 PM 0.	.0KB/s 袋 (3)	\$ 00 °ant 00 %	al 😳	5:42	PM 0.2KB/s 🏂 🕄	
Local Connection	Û	<	Export Limitatio	n Settings		<	Export Limitat	ion
CD Bluetooth:BlueLink:05838		Export Lin	itation Settings	Off	\sim	Exp	ort Limitation Settings	
Device Info	>							
3 Device Maintenance								
A Initialization								
Battery Settings								
S Protection Parameters								
Power Adjustment								
Working Modes								
Communication Settings								
Export/Generation Limitation Settings								
💮 Testing device								
V-Watt/V-Var								
Parallel connection setting								
			SAVE				Enable	
							Off	

Self-consumption Mode: When the solar is sufficient, electricity generated by photovoltaic system will be supplied to load first, the surplus energy will be stored in battery, then the excess electricity will be exported to the grid. When the solar is insufficient, the battery will release electricity to supply load. Back-up Mode: Reserved Backup SOC setting value can be adjusted, when battery SOC is less than reserved SOC value, battery can only be charged, until SOC reaches reserved value, the battery will be stopped charging; when SOC is larger than SOC setting value, battery will behave as Self-use mode. Time-of-use Mode: Battery charging period and discharging period can be set , during charging period, battery can only be charged, while in discharging period, battery can only be discharged, the rest of the period, battery will behave as Self-use mode.

6.6. Configuring the Export Limit

Two methods are available to control the export limit. You can use either of them to implement the export limit settings.

6.7. Self-test (For Italy)

Italian Standard CEI0-21 requires a self-test function for all inverter that connected to utility grid. During the self-testing time, inverter will check the reaction time for over frequency, under frequency, overvoltage and undervoltage. This self-test is to ensure the inverter is able to disconnect from grid when required. If the self-test fails, the inverter will not able to feed into the grid. The steps of running Self-test are as followed:

Step 1: Connect a communication module (Wi-Fi/ 4G/Ethernet) with inverter (connection procedure can refer to eSolar Module Quick Installation Manual) Step 2: Select Italy for Country and choose your corresponding Grid Code from Initial Setting.

Method 1: Export limitation setting is to control the export electricity to the grid.

Method 2: Generation limit is to control the electricity generated by the inverter.



28	device maintenance	>
<u>A</u>	Initial Setting	>
置	InvWaveCheck Set	>
6	Protection data	>
ē	Feature data	>
<u></u>	Power adjustment	>
@	Communication	>
0	Export limitation setting	>
ß	Self-test	>

Step 3: You can choose self-test item required. Individual self-test time is approx. 5 minutes. All self-test time is approx. 40 minutes. After the self-test is completed, you can save the test report. If self-test is failed, please contact with SAJ or your inverter supplier.









TROUBLESHOOTING

Troubleshooting

Code	Fault Information	Code	Fault Information
1	Master Relay Error	34	Master Bus Voltage Low
2	Master EEPROM Error	35	Master Grid Phase Lost
3	Master Temperature High Error	36	Master PV Voltage High
4	Master Temperature Low Error	37	Master Islanding Error
5	Lost Communication M<->S	38	Master HW Bus Voltage High
6	GFCI Device Error	39	Master HW PV Current High
7	DCI Device Error	40	Master Self-Test Failed
8	Current Sensor Error	41	Master HW Inv Current High
9	Master Phase1 Voltage High	42	Master AC SPD Error
10	Master Phase1 Voltage Low	43	Master DC SPD Error
11	Master Phase2 Voltage High	44	Master Grid NE Voltage Error
12	Master Phase2 Voltage Low	45	Master Fan1 Error
13	Master Phase3 Voltage High	46	Master Fan2 Error
14	Master Phase3 Voltage Low	47	Master Fan3 Error
15	Grid Voltage 10Min High	48	Master Fan4 Error
16	Off Grid Output Voltage Low	49	Lost Communication between Master and Meter
17	Off Grid Output Short Circuit	50	Lost Communication between M<->S
18	Master Grid Frequency High	51	Lost Communication between inverter and Grid Meter
19	Master Grid Frequency Low	52	HMI EEPROM Error
20	BAT Input Mode Error	53	HMI RTC Error
21	Phase1 DCV High	54	BMS Device Error
22	Phase2 DCV High	55	BMS Lost. Conn
23	Phase3 DCV High	56	CT Device Err
24	Master No Grid Error	57	AFCI Lost Err
25	DC Reverse Connect Error	58	Lost Com. H<->S Err
26	Parallel machine CAN Com Error	59	Lost Communication between inverter and PV Meter
27	GFCI Error	61	Slave Phase1 Voltage High
28	Phase1 DCI Error	62	Slave Phase1 Voltage Low
29	Phase2 DCI Error	63	Slave Phase2 Voltage High
30	Phase3 DCI Error	64	Slave Phase2 Voltage Low
31	ISO Error	65	Slave Phase3 Voltage High
32	Bus Voltage Balance Error	66	Slave Phase3 Voltage Low
33	Master Bus Voltage High	67	Slave Frequency High



Code	Fault Information		
68	Slave Frequency Low		
73	Slave No Grid Error		
74	Slave PV Input Mode Error		
75	Slave HW PV Curr High		
76	Slave PV Voltage High		
77	Slave HW Bus Volt High		
81	Lost Communication D<->C		
83	Master Arc Device Error		
84	Master PV Mode Error		
85	Authority expires		
86	DRM0 Error		
87	Master Arc Error		
88	Master SW PV Current High		
89	Battery Voltage High		
90	Battery Current High		
91	Battery Charge Voltage High		
92	Battery Over Load		
93	Battery Soft Connect Time Out		
94	Output Over Load		
95	Battery Open Circuit Error		
96	Battery Discharge Voltage Low		

Please contact your supplier for troubleshooting and remedy.



APPENDIX

8.1. Recycling and Disposal

This device should not be disposed as a residential waste.

An inverter that has reached the end of its operation life is not required to be returned to your dealer; instead, it must be disposed by an approved collection and recycling facility in your area.

8.2. Transportation

Be careful with the product transportation and storage. Keep less than 5 cartons of inverter in one stack.

8.3. Warranty

Check the product warranty conditions and terms on the SAJ website: https://www.saj-electric.com/

8.4. Contacting Support

Guangzhou Sanjing Electric Co., Ltd.

Postcode: 510663

Website: https://www.saj-electric.com/

Technical Support & Service

Tel: +86 20 6660 8588

Fax: +86 206660 8589

E-mail: service@saj-electric.com

International Sales

Tel: 86-20-66608618/66608619/66608588/66600086

Fax: 020-66608589

E-mail: info@saj-electric.com

China Sales

Tel: 020-66600058/66608588 Fax: 020-66608589

8.5. Trademark

SAJ is the trademark of Sanjing.

Address: SAJ Innovation Park, No.9, Lizhishan Road, Guangzhou Science City, Guangdong, P.R.China.